

DALNET



ION Slides 2 PC



1. Open PhotoImpression 6 program:



2. Insert slides or negatives into the appropriate tray (3 openings for the slide tray, 6 openings for the negative tray).




3. Click "Get Photo".
4. Click "Acquire from Scanner."
5. Insert the tray into the scanner slot until you feel it click into place.

DALNET



ION Slides 2 PC

6. On the computer screen, you will see the following window. Be sure to select OVT SCANNER. Change the format and quality to whatever you'd like. Also select the location where you'd like to save the pictures. Finally, select the correct scanning options for the film type. When you are finished, click Acquire.

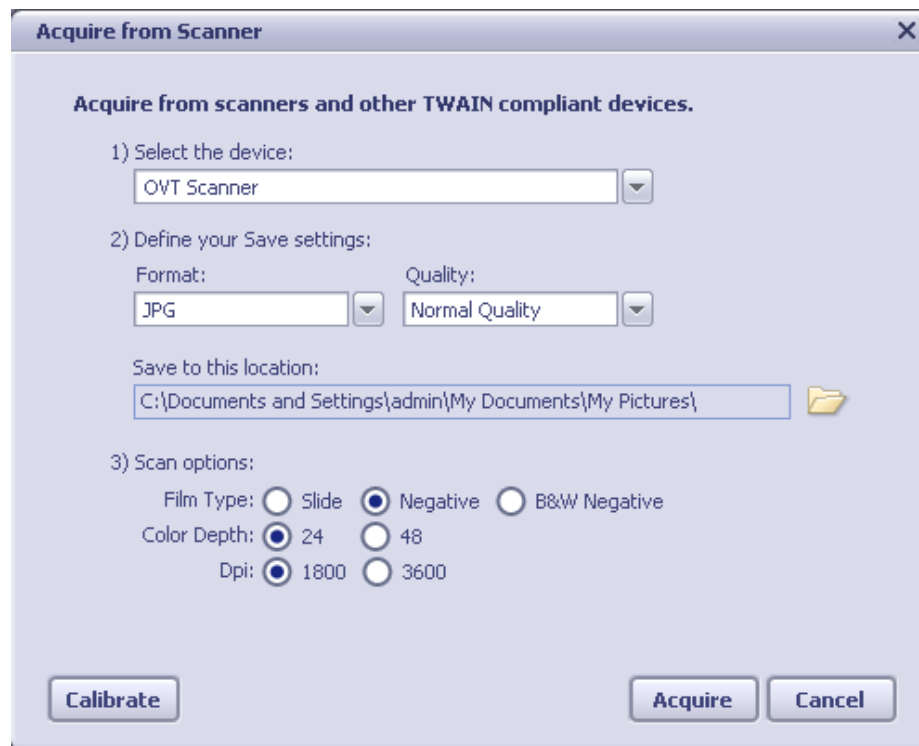


DALNET



ION Slides 2 PC


7. Line the slide or negative that you would like to transfer in the “live view” window.
See below.

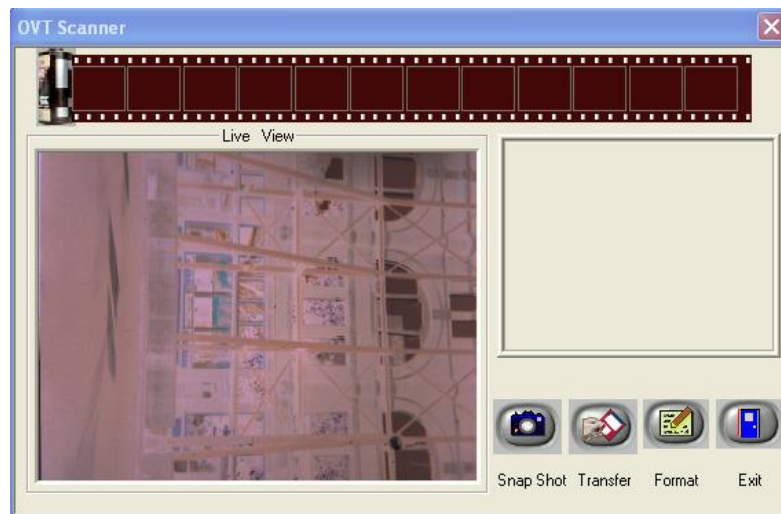

8. Click “Snap Shot.”



9. Then click “Transfer.”




DALNET



ION Slides 2 PC

10. The image will be saved in the location that was specified in Step 6. You will also be able to view them in the PhotoImpression software. See below. If you would like to rename the image, right-click and select rename.

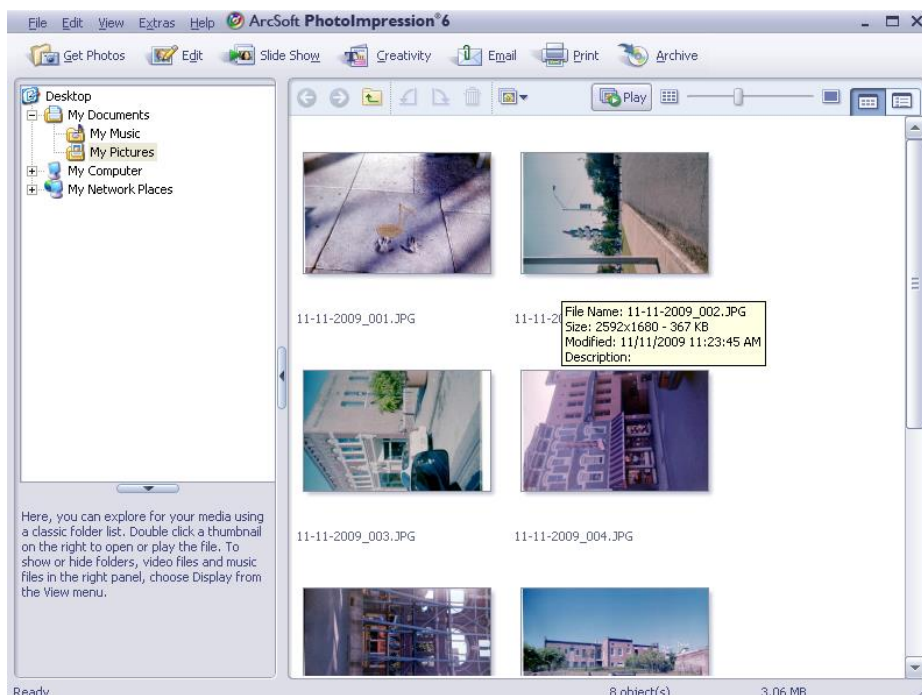

11. Repeat Steps 1 through 9 for each negative/slide you would like to transfer.
12. After the images have been transferred, you can save them to a disc or e-mail them as attachments.